

# 15' x 15' PINNACLE SERIES HIGH PEAK FRAME TENT 1 PC. PRODUCT MANUAL

SAFETY



Read this manual before using this product. Failure to do so can result in serious injury.  
SAVE THIS MANUAL



INSTALLATION

## NOTICE

The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the user that common sense and caution are factors which cannot be built into this product, but must be supplied by the installer and/or user.

Tent, canopy, structure, and shelter products are manufactured for use as temporary structures and do not meet structural code unless specified. Since weather is unpredictable, the installer/end user must incorporate their own good judgment, common sense and knowledge of local conditions with the installation instruction guidelines. The installer is responsible for anticipating weather severity for proper time and method of installation.

MAINTENANCE


## WARNING SYMBOLS AND DEFINITIONS

|                 |  |
|-----------------|--|
|                 | This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. |
| <b>▲WARNING</b> | Indicates a hazardous situation which, if not avoided, could result in death or serious injury.  |
| <b>▲CAUTION</b> | Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.   |

CONTACTS



**Description**

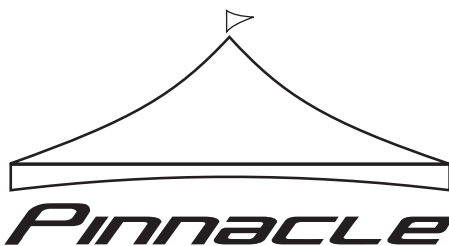

**15' x 15' Pinnacle Series High Peak Frame Tent, 1 Piece**

Pinnacle High Peak Cross Cable tents are designed with a high peak tube supported by cross cables extending from each corner tube, maximizing the usable space underneath while at the same time eliminating the need for interior frames or support poles. The simple design allows for easy transportation, storage, and installation involving only two people due to the reduced amount of hardware in comparison to other frame or pole tents.

**Suggested Equipment**

Drop cloth or ground cloth, sledge hammer, or electric/gas breaker hammer fitted with stake driver bit, and stake puller.

**Colors available by special order**

Custom Printing Available

**Pinnacle Series Frame Tent Specifications**

|                            |  |
|----------------------------|--|
| Width                      | 15 ft/4.6 m                              |
| Length                     | 15 ft/4.6 m                              |
| Area                       | 225 ft <sup>2</sup> /21.2 m <sup>2</sup> |
| Eave Height                | 8'/2.4 m                                 |
| Overall Height             | 15'9"/4.8 m                              |
| Pitch                      | 6'9"/2.1 m                               |
| Complete Weight            | 249 lbs/113 kg                           |
| Series / Brand             | Pinnacle                                 |
| Class                      | Cross Cable                              |
| Center Pole                | No                                       |
| Style / Shape              | High Peak                                |
| Expandable                 | No                                       |
| Custom Printing Available  | Yes                                      |
| Fabric Material            | PVC Coated Polyester                     |
| Fabric Material Weight     | 16 oz/yd <sup>2</sup> /540 gsm           |
| Fabric Translucency        | Blockout                                 |
| Water Repellency           | Waterproof                               |
| Flame Resistant            | Yes                                      |
| UV Resistant               | Yes                                      |
| Mold and Mildew Resistant  | Yes                                      |
| Frame / Pole Material      | Aluminum                                 |
| Longest Component          | 8'/2.4 m                                 |
| Persons required for setup | 2  |
| Occupancy                  | 23 Sit Down Dinner-38 Cathedral Seating  |

**SAFETY**

**INSTALLATION**

**MAINTENANCE**

**CONTACTS**

## PERSONAL SAFETY



**STAY ALERT:** Watch what you are doing, and use common sense when installing/striking a tent, canopy, structure, or shelter. Do not setup/strike while under the influence of drugs, alcohol, or medication. A moment of inattention may result in serious personal injury.



**DO NOT OVER LIFT:** The equipment may be heavy and may require 2 or more people to lift and move.



**DO NOT OVERREACH:** Keep proper footing and balance at all times. Use a ladder when necessary.



**DRESS PROPERLY:** Do not wear loose clothing or jewelry. Contain long hair. Keep hair, clothing, and hands/gloves away from power equipment and snag or pinch points.



**USE SAFETY EQUIPMENT:** Eye protection, safety shoes, hard hats, or hearing protection must be used for appropriate conditions.

## WEATHER

Since weather is unpredictable, the installer/end user must incorporate their own judgment, common sense and knowledge of local conditions with the installation instruction guidelines. The installer is responsible for anticipating weather severity for proper time and method of installation.

- **Rain:** **⚠️WARNING** Rain water can collect on the tent fabric and cause 'ponding' or 'water pocketing' under certain weather conditions, especially if the tent is not installed and tensioned correctly. The additional weight from the water will cause the tent to sag and ponding will continue to get worse. The weight can destroy the tent fabric and/or cause the poles and baseplates to sink into the soil. Highly saturated soil will cause the stakes to lose their holding power.
- **Wind:** **⚠️WARNING** Wind or wind and rain can cause the tension of the tent to change by loosening ratchet assemblies, pulling stakes, and or causing the poles to shift or sink. It is very important to do routine maintenance checks and maintain proper tension on the tent top at all times especially if weather conditions are such that ratchets are beginning to loosen.
- **Lightning:** **⚠️WARNING** Immediately evacuate the tent until the chance of a lightning strike is no longer present.
- **Snow:** Tents, canopies, structures, and shelters are not designed to carry any type of snow loading. These products should not be used if snow of any kind is present, and must be evacuated immediately.

## SITE SELECTION

Site selection is extremely important. The installer must adhere to local building codes and fire regulations. The installer must evaluate each installation site and determine the proper securing and anchoring method and device appropriate for the conditions. Some soils require different staking or securing methods than what may be/have been purchased with the standard tent package. Celina Tent's instructions, YouTube videos, and Layout Handbook summarize all the functions of each product, the rules for using them and suggestions for their use. However, field situations, site conditions, weather and local experience may mandate other methods. Review the following conditions at the proposed site and plan accordingly.

The best site qualities are:

- **Location:** Elevated, level, and clear of debris
- **Soil Conditions:** Adequate for stable anchoring
- **Space:** Adequate space for the perimeter and stake lines
- **Surface Type:** Grass, Gravel, Concrete, Asphalt, Wood
- **Site Access:** Materials and services can easily be delivered to the site

**⚠️WARNING** Also allow for:

- **Overhead Obstructions:** Electrical/telephone lines, tree branches
- **Underground Utilities:** Electric, Gas, Oil, Steam, Telephone, CATV, Water, Sewer
- **Weather Effects:** Monitor for extreme weather conditions and evacuate if necessary
- **Emergency Exit Capabilities:** Provide evacuation routes in case of a fire or bad weather

## Before You Stake

By law you are required to contact your local “Call before you dig” number before you plan to dig or drive tent stakes / anchors. After calling, your local utility companies will mark the location of all underground utility lines. Laws from state to state vary on how far in advance you must call. Planning ahead and checking with your state’s program is always a smart idea. Failure to obtain a utility line location before digging can result in a substantial fine or serious injury. Please find your local “call before your dig number” in the contacts section of this manual.


**⚠WARNING** Prior to staking, be sure that no underground utilities are present. Celina is not responsible for methods that installers may choose to erect and secure the tent, canopy, structure, or shelter to the site surface. Celina’s responsibility is limited to the manufacture of the tent parts and materials. It is the installer’s responsibility, not Celina’s, to determine the appropriate number of stakes to meet the necessary wind loads on the installation site.

**⚠WARNING** Soil and setup conditions can vary greatly between installation sites. It is the installer’s responsibility to be sure the staking is adequate for each site on each setup. Additional staking, tiebacks, and/or stake bars may be required in order to safely setup and secure the product.


**⚠WARNING** The number of stakes suggested in this manual routinely does not meet the relevant local codes of the installation site. The number of stakes included in the standard kit will, in most cases, keep the tent, canopy, structure, or shelter setup. Due to various soil conditions the standard staking kit may be inadequate to keep the tent secure in high winds and wet or threatening weather. Regardless of the number of stakes included in standard kits, Celina makes no representation or warranty as to whether this is sufficient to meet the requirements for your installation site(s).

## Staking Basics

A properly driven stake will have 6” or less of the head exposed. The deeper that the stake is driven, the greater holding strength the stake will have. Anchoring stakes must be driven deep and vertical.

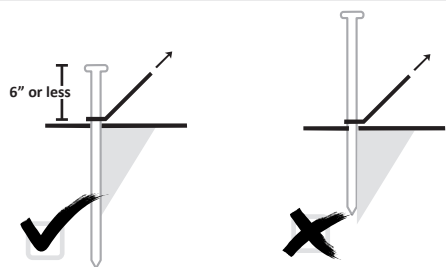

 


 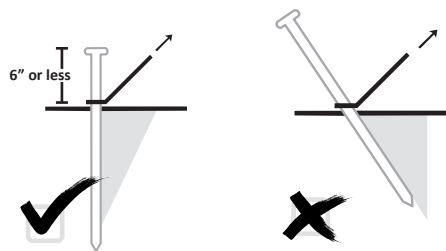




 

 

 
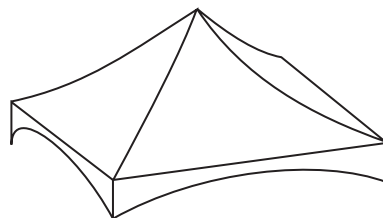
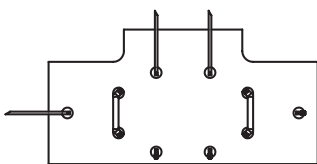

Stakes driven vertically have a greater holding strength than stakes driven at an angle. Vertically is defined as straight up down or angled up to 10° away from the tent, canopy, structure, or shelter.




 





For more information on staking and soil conditions, please view Celina Tent’s 15 part video series on YouTube.com or follow this link: Stake Pull Demonstration (1/15) [www.goo.gl/v0XhV](http://www.goo.gl/v0XhV)

# REQUIRED HARDWARE

## 15' x 15' Pinnacle Series High Peak Frame Tent

| Description (Key)   | Size/Color                     | Qty.  | Picture  |
|---|--------------------------------|-------|--|
| Spreader Bar  | 6'8"                           | 8     |    |
| Legs  | 8'                             | 4     |    |
| Center Mast Assembly  | 7'                             | 1     |    |
| Center Mast Pole Pin  | 1'2.5"                         | 1     |   |
| Pinnacle Corner Fitting   |                                | 4     |   |
| Spreader Inserts  | 9"                             | 4     |   |
| Cross Cables  | 19'11"                         | 2     |    |
| Pinnacle Base Plate   |                                | 4     |   |
| Anchoring Hook  | 24"                            | 4     |    |
|  <b>C. Ratchet Buckles Loop Strap w/ O Ring</b> | 1" Ratchet w/<br>4' Strap/Loop | 4     |    |
|  <b>D. Loop Strap</b>                           | 6' Strap/Loop                  | 4     |    |
| NOTE: When the Ratchet Buckle with Loop Strap (A/C) is connected to Loop Strap (B/D) it forms the Ratchet Assembly.             |                                |       |  |
| Tent Top  | 15'x15'                        | 1 pc. |   |
| Tent Bag  | B                              | 1     |  <span style="margin-left: 20px;">OR</span> <br><div style="display: flex; justify-content: space-around; font-size: small;"> <span>Wrap Around Tent Bag</span> <span>Round Bottom Tent Bag</span> </div> |

# OPTIONAL ACCESSORIES

| Description (Key)   | Size/Color                     | Qty. | Picture  |
|---|--------------------------------|------|--|
|  <b>A. Ratchet Buckle with Loop Strap</b> | 2" Ratchet w/<br>5' Strap/Loop | 4    |  |
|  <b>B. Loop Strap</b>                     | 8' Strap/Loop                  | 4    |  |
|  <b>Single Head Stake</b>                | 36" or 42"                     | 4    |  |
| Carabiner   | 4.28" x 2.39"                  | 4    |   |
| Sidewall(s)   | 15'                            | 4    |  |



SAFETY

INSTALLATION

MAINTENANCE

CONTACTS


# RATCHET ASSEMBLIES

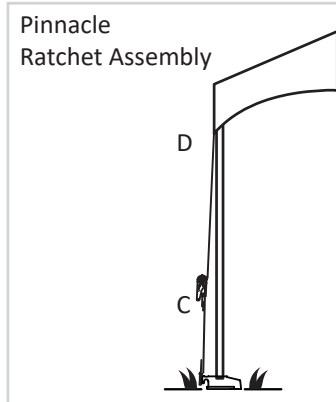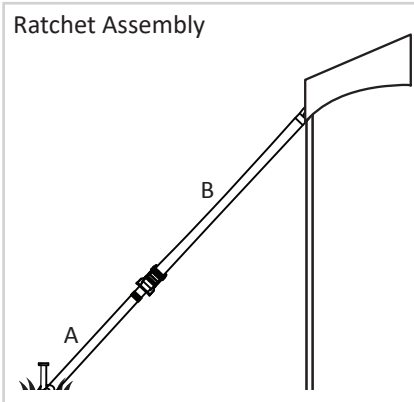

- A. Ratchet Buckle with Loop Strap
- B. Loop Strap (8')
- C. Ratchet Buckles Loop Strap w/ O Ring
- D. Loop Strap (6')

SAFETY

# PARTS / MINIMUM STAKING LAYOUT

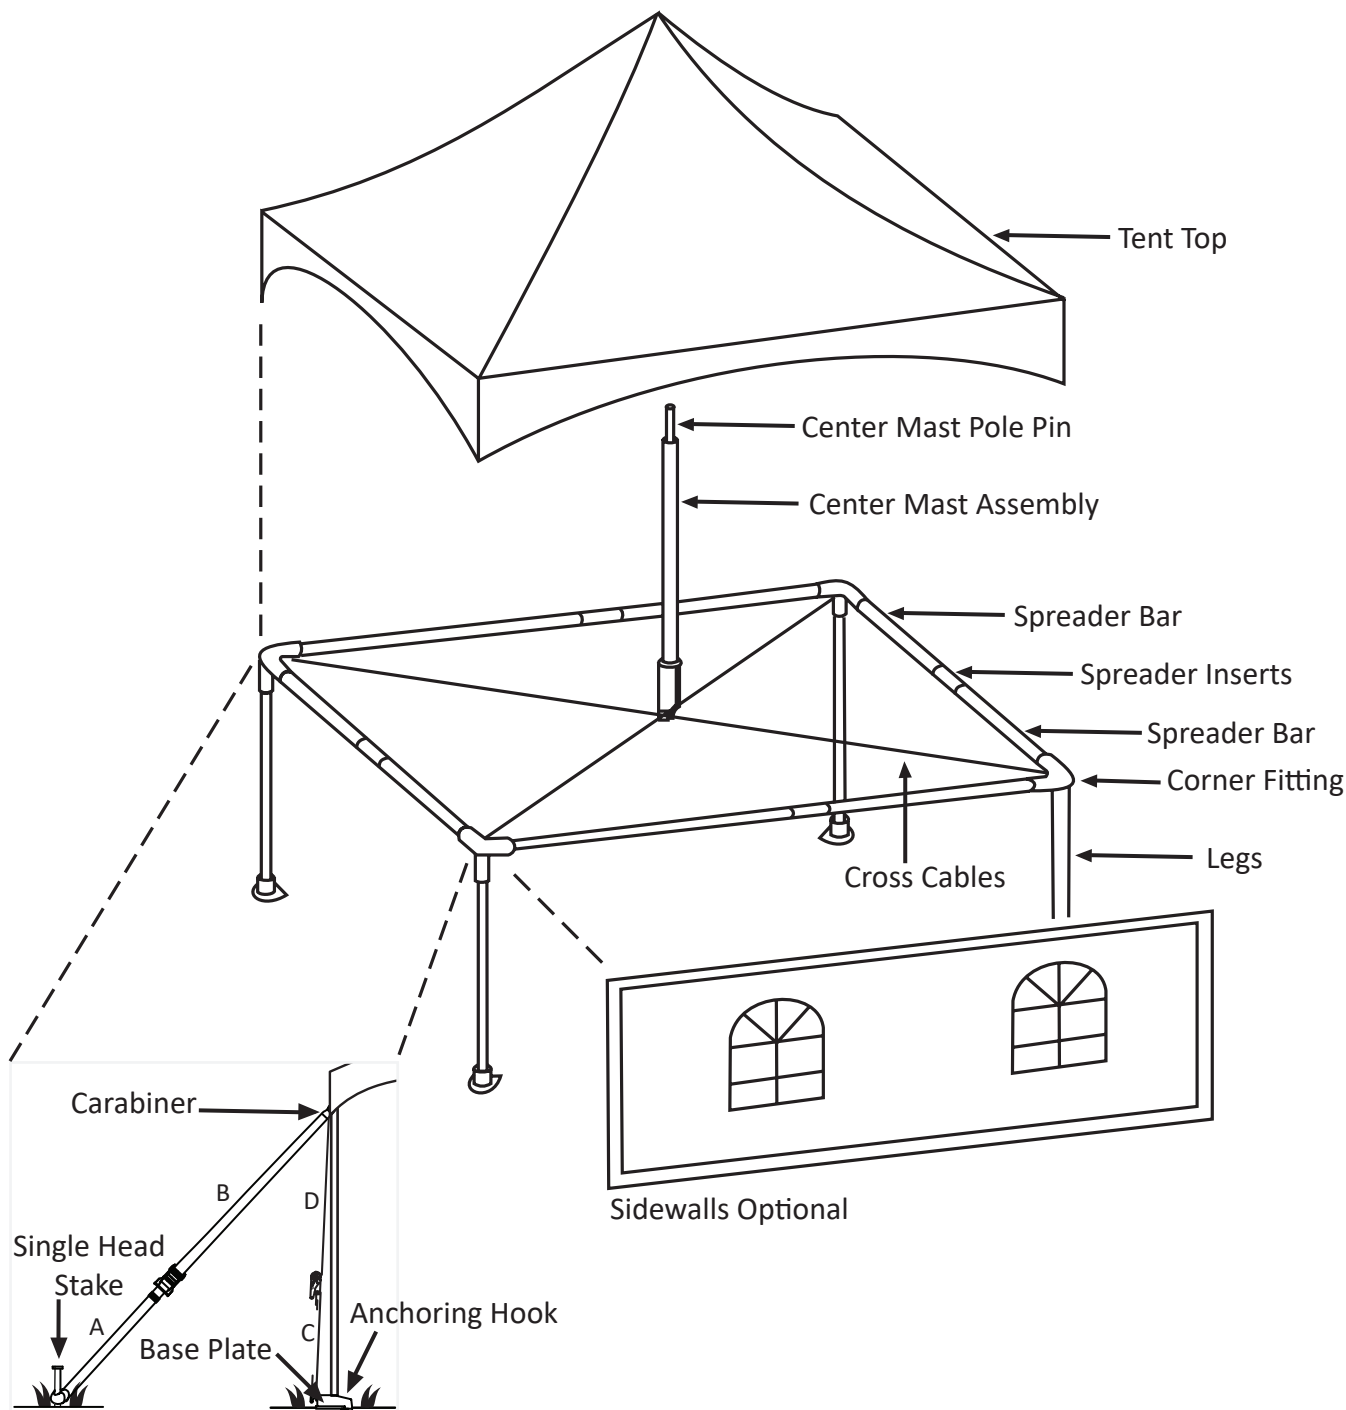



INSTALLATION

MAINTENANCE



CONTACTS

## Set Up Instructions



1. Lay out a drop cloth in the area the tent will be installed to protect the tent top of dirt and abrasions.
2. Lay out the frame parts on the ground in the approximate location that they will be when the frame is assembled. (See parts/minimum staking layout diagram)
3. Start in the middle of one side by connecting both ends of the 9" spreader insert to each of the 6'8" spreader poles. Continue this until all four sides are completed.
4. Starting at a corner, insert the spreader pole (6'8" connected tube) into the corner fitting.

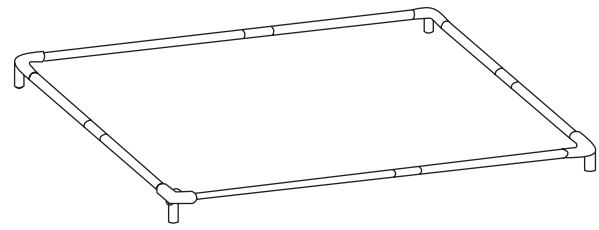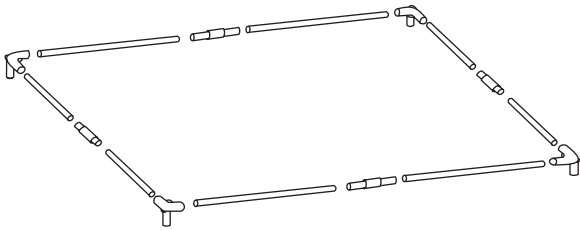


5. Continue to insert all spreaders into the corner fittings until a square is formed.
6. Connect one cross cable to the inside hook on the corner fitting. Connect the other end of this cable to the hook on the corner fitting at the diagonal corner. Repeat this method to secure other cross cables.
  - a. In order to fit the cable onto the 4th corner fitting hook, you may need to lift the frame up on that corner approximately 4 feet. This reduces the distance between the corners allowing the cable to reach the 4th corner fitting hook.

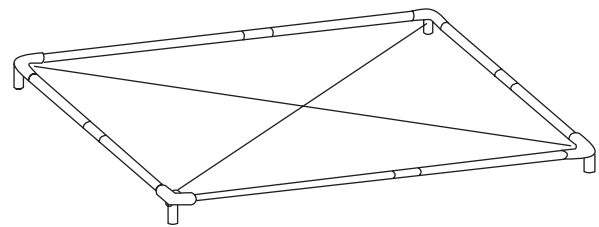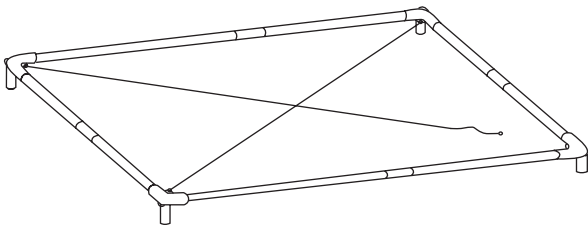

7. Lay the tent top out over the cables and frame with the top of the tent facing upward. Pull the tent top over the frame, lifting up on the fabric or "flapping" it to create a cushion of air. Make sure the tent top is centered. Start in one corner by securing the white nylon strap over the hook on the outside of the corner fitting.
  - a. Continue to secure all the tent corner straps to the outside corner fittings. Make sure the strap with the O ring is the last strap to be secured. This ring and strap will allow for better grip when securing the top over the last fitting.

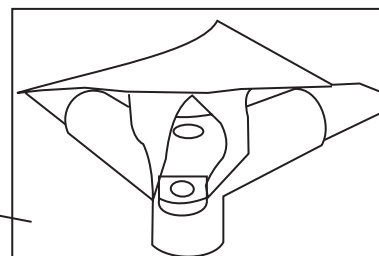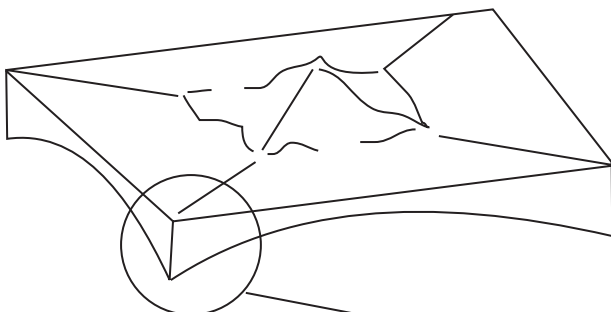

8. Fasten the loop end of the 8' loop strap (B) to the carabiner. Secure the carabiner to the hook on the outside of the corner fittings (the same hook that the tent top is secured to).

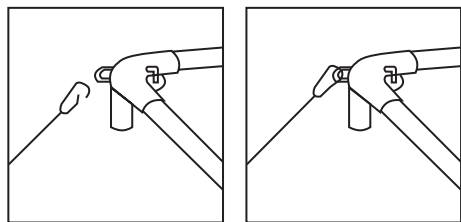


9. Place stakes 5' out from each leg; drive stakes into the ground so that approximately 6" or less of the stake is showing.


10. Attach the ratchet buckle with loop straps (A) to the stakes by turning the 6" loop at the end of the ratchet inside out and pull the strap through the loop to create a noose and pull tight over the stake. Take the loop strap (B) attached to the carabiner and pull it through the reel bars slot of the ratchet (ratchet buckle needs to have handle facing upward at all time) and pull the loop strap (B) back towards the tent approximately 1 1/2 feet. Hold the strap at this point with one hand and begin to crank the ratchet handle back and forth.



11. Once the top is in place and secured, you're ready to install the legs. Lift one side of the tent up and install the legs (8') at the corners, leaving the tent at an angle. Attach the base plate to each leg with the smaller holes facing the interior of the tent.

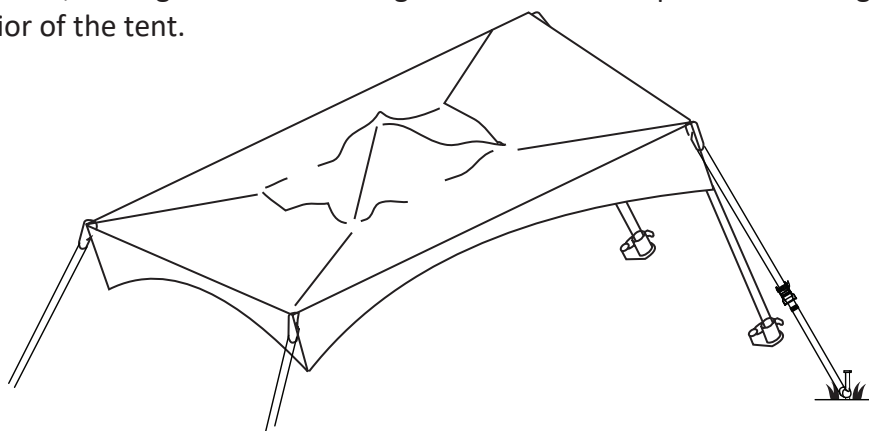


12. Fasten the 6' series loop strap (D) to each corner through the two metal O rings on the tent top, then through the end loop and tighten.

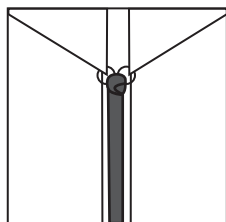





13. Place the O Ring of the ratchet buckles loop strap w/ O ring (C) on the hook in the base plate and take the loop strap (D) attached to the tent top O rings and pull it through the reel bars slot of the 1" ratchet (ratchet buckle needs to have handle facing upward at all times) and pull the loop strap (D) back towards the tent approximately 1 ½ feet. Hold the strap at this point with one hand and begin to crank the ratchet handle back and forth. This will keep the legs secure when installing the center mast.

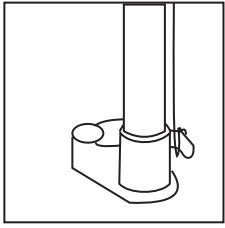


14. Now you need to install the center mast through the tent top. Place the center mast pin at the top of the center mast pole. Unhook the clip at the bottom of the center mast pole and position the bottom of the center mast pole onto the **top cable**. Making sure the mast pin at the top is through the hole and is visible from the outside of the tent top, slide the center mast pole up the cable toward the intersection of the cables. Move the center mast pole to the center of the tent making sure it rests on both cross cables. Once in place, put the clip back on the bottom of the center mast pole making sure it is under both cables to keep it in place.

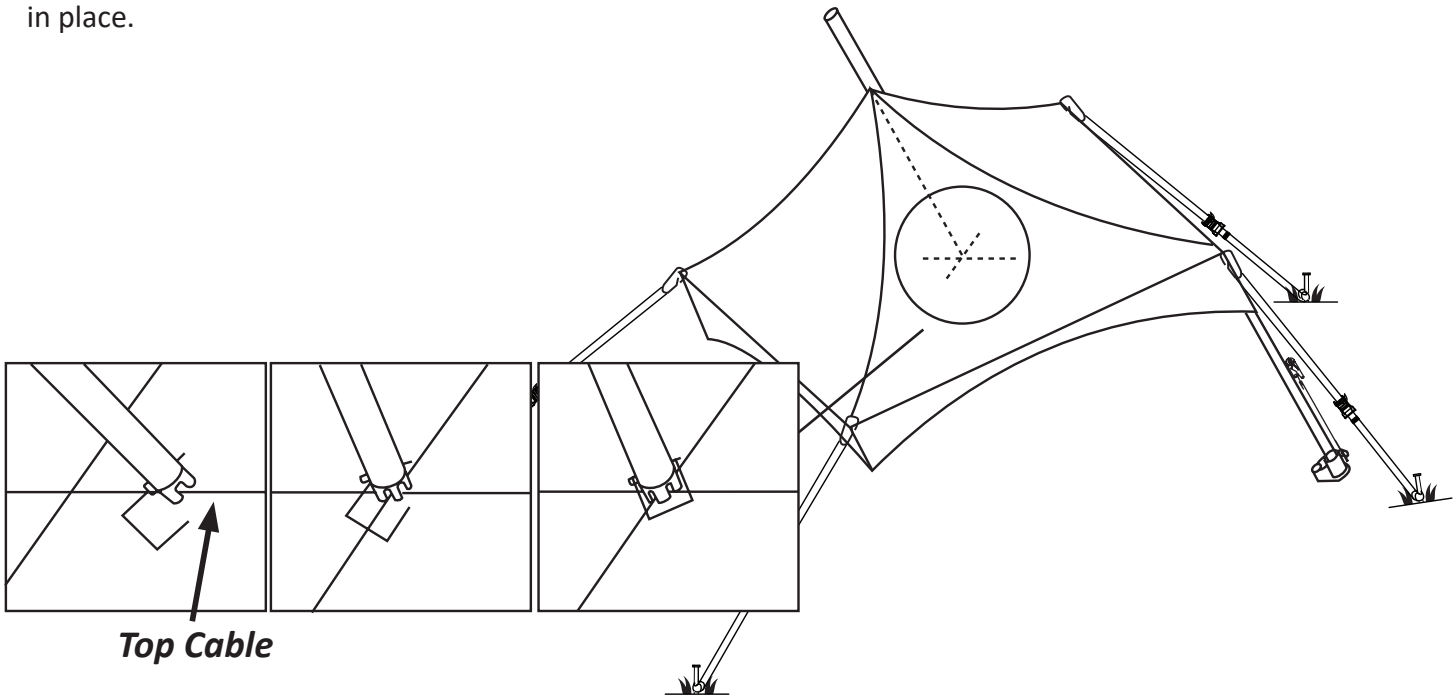

15. Install the remaining two legs (8') and ratchet assemblies; be sure the smaller holes of the base plate are facing the interior of the tent.

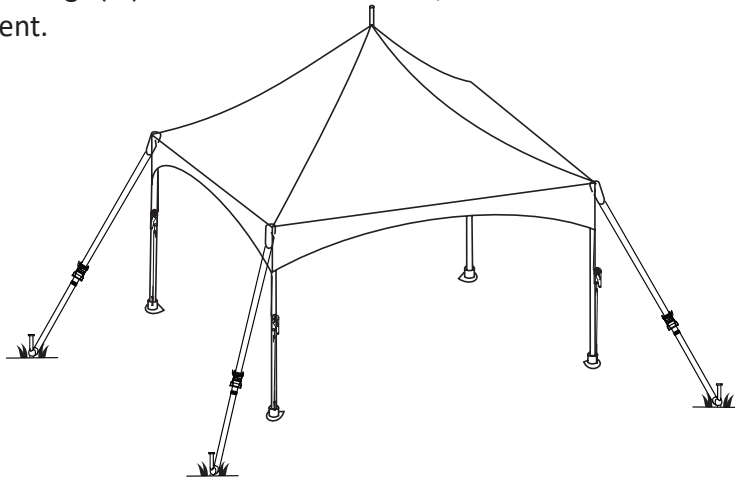

16. Make sure the legs are straight then secure each base plate by driving a 24" anchoring hook into the smaller hole of the base plate tighten all ratchet assemblies.

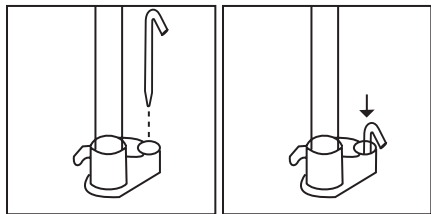

17. Roll excess ratchet straps and secure into the ratchet buckle.





## Sidewall Setup Instructions (This step is optional)

The sidewalls are designed to hang around the outside of the legs with the ratchet rope on the exterior of the sidewalls.

a. Hang each sidewall by buckling the straps on the top of the side wall around the spreader bar that runs around the perimeter of the tent. Each sidewall will cover the distance between two legs. Loosen the tent top tension if it is difficult to get the straps around the spreader bar.

b. Tighten the hanging straps so the sidewall is hanging at the appropriate height or fit with the ground surface the tent is sitting on. Tuck the ends of each sidewall between the ratchet assembly and the tent leg. Make sure the sidewall is centered between the two legs.

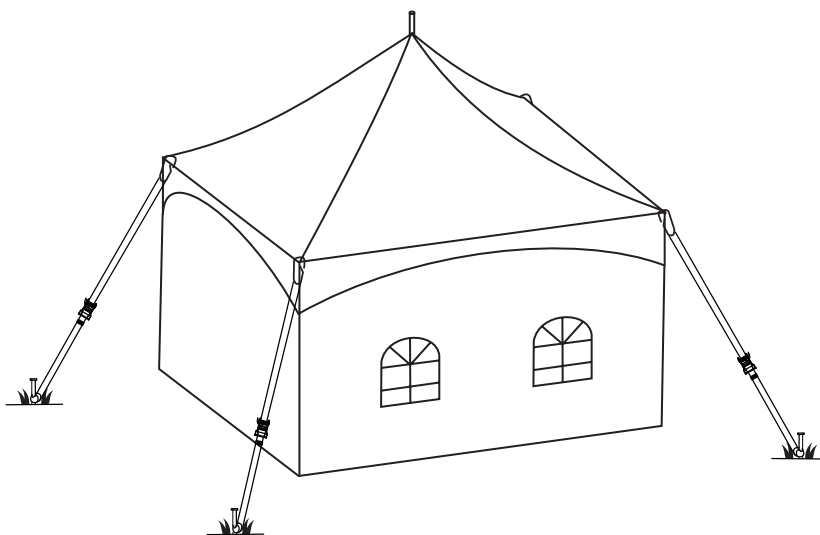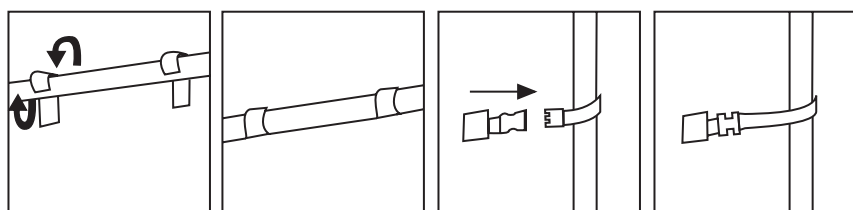

## Striking Instructions

1. Loosen all ratchet assemblies.
2. Remove anchoring hook from pinnacle base plates.
3. Remove ratchet assemblies attached to base plates.
4. Remove 2 legs from one side of the tent and carefully set the tent frame on the ground.
5. Remove center mast assembly
6. Remove opposite side legs.
7. Unfasten the corner straps, completely disconnecting the tent top from the frame and stakes.
8. Remove ratchet assemblies and carabiners.
9. Roll out a drop cloth next to the frame.
10. Carefully remove the tent top from the frame, lifting up on the fabric or “flapping” it to create a cushion of air.
11. Fold and roll the tent top as tight as possible. Remember not to stand or walk on the tent top fabric.
12. Bagging (always use a drop cloth to protect the tent top from dirt and abrasions while bagging):
  - a. For Wrap-Around Tent Bag:
    - i. Lay the bag next to the tent top with the side-release buckles facing down. Roll the tent top onto the center of the bag.
    - ii. Connect the two short male and female side-release buckles; pull tight.
    - iii. Connect the remaining side-release buckle and pull tight.
13. Disassemble all cables and fittings. Work from the perimeter of the frame inward.
14. Fold and roll up the drop cloth.
15. Remove remaining stakes.

## FLAME RESISTANCE

Celina fabrics are inherently flame resistant. Open flames should never be used under any tent, canopy, structure, or shelter. Fabrics meet or exceed one or more of the following flammability specifications:

|          |                |             |
|----------|----------------|-------------|
| NFPA-701 | CPAI-84        | ASTM D 6413 |
| BS 5438  | BS 7837 (1996) | DIN 4102-B1 |

## TENT CARE

For maximum life of Celina fabrics, Celina recommends regular cleaning with the use of a soft brush with neutral soaps or cleaners, such as Celina Cleaning Products, Ivory dish soap, or warm water. Thorough rinsing and drying is required before storing the fabric.

### Things that will cause premature degradation and may reduce life expectancy of a tent:

- Improper handling during installation/dismantling on rough surfaces will create pinholes and abrasions. ALWAYS USE A DROP CLOTH/GROUND CLOTH DURING INSTALLATION AND DISMANTLING.
- Walking on the fabric during installation/dismantling will create pinholes and abrasions.
- Extended use of the tent without cleaning
- Accumulation of dirt on the vinyl surface will promote the growth of mold and mildew and premature wear.
- Storage of vinyl that has not been dried thoroughly. Even a slightly damp product can promote the growth of mildew when folded and stored. Mold and mildew may require harsh cleaners to remove, which may cause premature wear. The best solution is to take every precaution to keep mold and mildew from growing in the first place. NEVER STORE A TENT, CANOPY, STRUCTURE, OR SHELTER IN A WET OR DAMP CONDITION.
- Harsh detergents and cleaners, which contain a solvent or bleach. The longer the exposure of PVC vinyl to these products, the more it will reduce the life of the PVC vinyl.
- High-abrasive cleaners, including wire brushes, power washers and/or commercial washing machines will result in premature wear and deterioration of tent fabrics.
- Wind whip – Loosely tensioned fabric that whips in the wind will damage over time.

### Vinyl Repair

Celina's repair products provide an easy solution to tears, punctures, or holes. Repair kits and tools are available online at [www.GetTent.com](http://www.GetTent.com) or by contacting Celina.

## PRODUCT WARRANTY

Celina Tent Inc. warrants that this product will be free from defects in material and workmanship for a period of one (1) year following the date of purchase. Defects are limited to any defect which is a result of the manufacturing process. Excluded are holes, punctures, or other damages which can be caused during normal installation of a tent whenever proper procedures are not followed. Celina at its option will repair or replace this product or any component of product found to be defective during this warranty period. This warranty is valid for the original purchaser only, and is not transferable. This warranty does not cover normal wear or damage resulting from negligent use or misuse of the product, use contrary to instructions, repairs or alterations by anyone other than Celina, or forces of nature. Celina Tent is not responsible for methods that installers may choose to erect and secure the tent to the ground. Celina's responsibility is limited to the manufacture of the tent parts and materials.

This warranty is in lieu of all other warranties, and there are no warranties, expressed or implied, including warranties of merchantability of fitness for a particular purpose, which extend beyond the description on the face hereof. Celina Tent Inc. shall not be liable for any incidental or consequential damages. Some jurisdictions do not allow the exclusion of implied warranties or the imitation on incidental or consequential damages, so the above exclusions and limitations may not apply to you.

# CALL BEFORE YOU DIG OR STAKE

| STATE         | CENTER                                  | PHONE        |
|---------------|---|--------------|
| Alabama       | Alabama Line Location                   | 800/292-8525 |
| Alaska        | Locate Call Center of Alaska            | 800/478-3121 |
| Arizona       | Arizona Blue Stake                      | 800/782-5348 |
| Arkansas      | Arkansas One Call System                | 800/482-8998 |
| California    | Underground Service Alert               | 800/227-2600 |
| Colorado      | Utility Notification Center of Colorado | 800/922-1987 |
| Connecticut   | Call Before You Dig                     | 800/922-4455 |
| Delaware      | Miss Utility of Delaware                | 800/282-8555 |
| Florida       | Call Sunshine                           | 800/432-4770 |
| Georgia       | Utilities Protection Center             | 800/282-7411 |
| Hawaii        | Underground Service Alert North         | 800/227-2600 |
|               | Underground Service Alert South         | 800/227-2600 |
| Idaho         | Palouse Empire Underground              | 800/822-1974 |
|               | Utilities Underground Location Center   | 800/424-5555 |
|               | Dig Line                                | 800/342-1585 |
|               | One Call Concepts - Idaho               | 800/626-4950 |
|               | Shoshone County One Call                | 800/398-3285 |
| Illinois      | Chicago Utility Alert Network           | 800/892-0123 |
| Indiana       | Indiana Underground Plant Protection    | 800/382-5544 |
| Iowa          | Underground Plant Location Service      | 800/292-8989 |
| Kansas        | Kansas One-Call Center                  | 800/344-7233 |
| Kentucky      | Kentucky Underground Protection         | 800/752-6007 |
| Louisiana     | Louisiana One Call System               | 800/272-3020 |
| Maine         | Dig Safe - Maine                        | 888/344-7233 |
| Maryland      | Miss Utility                            | 800/257-7777 |
|               | Miss Utility of DESMARVA                | 800/282-8555 |
| Massachusetts | Dig Safe-Massachusetts                  | 888/344-7233 |
| Michigan      | Miss Dig System                         | 800/482-7171 |
| Minnesota     | Gopher State One Call                   | 800/252-1166 |
| Mississippi   | Mississippi One Call System             | 800/227-6477 |
| Missouri      | Missouri One Call System                | 800/344-7483 |
| Montana       | Utilities Underground Location Center   | 800/424-5555 |
|               | Montana U-Dig                           | 800/551-8344 |
| Nebraska      | Diggers Hotline                         | 800/331-5666 |
| Nevada        | Underground Service Alert North         | 800/227-2600 |
| New Hampshire | Dig Safe-New Hampshire                  | 888/344-7233 |
| New Jersey    | Garden State Underground                | 800/272-1000 |
| New Mexico    | New Mexico One Call System              | 800/321-2537 |
|               | Las Cruces-Dona Ana Utility Council     | 888/526-0400 |

| STATE                | CENTER                               | PHONE        |
|----------------------|--------------------------------------|--------------|
| New York             | Dig Safely New York                  | 800/926-7962 |
|                      | New York City-Long Island One Call   | 800/272-4480 |
| North Carolina       | North Carolina One Call              | 800/634-4949 |
| North Dakota         | North Dakota One Call                | 800/795-0555 |
| Ohio                 | Ohio Utilities Protective Service    | 800/362-2764 |
|                      | Oil & Gas Producers Underground      | 800/925-2988 |
| Oklahoma             | Call Okie                            | 800/522-6543 |
| Oregon               | Oregon Utilities Notification Center | 800/332-2344 |
| Pennsylvania         | Pennsylvania One Call System         | 800/242-1776 |
| Rhode Island         | Dig Safe-Rhode Island                | 888/344-7233 |
| South Carolina       | Palmetto Utility Protection Service  | 800/922-0983 |
| South Dakota         | South Dakota One Call                | 800/781-7474 |
| Tennessee            | Tennessee One-Call System            | 800/351-1111 |
| Texas                | Texas One Call System                | 800/245-4545 |
|                      | Texas Excavation Safety System       | 800/344-8377 |
|                      | Lone Star Notification System        | 800/669-8344 |
| Utah                 | Blue Stakes Location Center          | 800/622-4111 |
| Vermont              | Dig Safe - Vermont                   | 888/344-7233 |
| Virginia             | Miss Utility of Virginia             | 800/552-7001 |
|                      | Miss Utility                         | 800/257-7777 |
| Washington           | Miss Utility of DELMARVA             | 800/441-8355 |
|                      | Notification Center                  | 800/424-5555 |
|                      | Utilities Council of Cowlitz County  | 360/425-2506 |
|                      | Upper Yakima City Underground        | 800/553-4344 |
|                      | Inland Empire Utility Coordinating   | 509/456-8000 |
| West Virginia        | Miss Utility of West Virginia        | 800/245-4848 |
| Wisconsin            | Diggers Hotline                      | 800/242-8511 |
| Wyoming              | Wyoming One Call                     | 800/348-1030 |
|                      | Call Before you Dig Wyoming          | 800/849-2476 |
| District of Columbia | Miss Utility                         | 800/257-7777 |
| Canada               | Alberta One Call                     | 800/242-3447 |
|                      | Ontario                              | 800/400-2255 |
|                      | Info-Excavation (Quebec)             | 800/663-9228 |
|                      | BC One Call                          | 800/474-6886 |
|                      | Manitoba - Winnipeg                  | 240/480-1212 |
|                      | Manitoba & Saskatchewan Safe         | 800/827-5094 |

SAFETY

INSTALLATION

MAINTENANCE

## SUPPORT

**For technical questions or replacement parts, please contact:**

Celina Tent, Inc. / GetTent.com  
 5373 State Route 29  
 Celina, Ohio 45822-9210 USA

**Telephone:** 419-586-3610

**Fax:** 419-584-0949

**Website:** www.GetTent.com

**Email:** support@celinatent.com

**YouTube:** <http://www.youtube.com/user/celinatent>

**Facebook:** <http://www.facebook.com/celinatent>

**Google +:** <http://goo.gl/qvVdv>

**Twitter:** <http://twitter.com/celinatent>

**LinkedIn:** <http://www.linkedin.com/company/celina-tent-fabric-structures>

CONTACTS