




Assembly Directions

10' x 10'

Presto! Tent Accessories		
Description	Size	QTY.
Side Poles	7' (2 Piece)	4
Center Pole(s)	114" (3 Piece)	1
Anchor Pin	24.6"	8
Sidewalls	20'	2

Key	
Symbol	Item Description
●	Side Poles
+	Center Pole
★	Anchor Pin
—	Rope (Attached to Top)

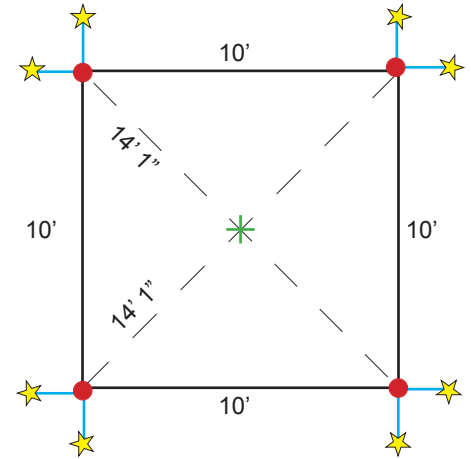

- Layout perimeter pole locations per the diagram. Measure diagonally from corner pole to corner pole to make sure the pole locations are squared up.
- Spread drop cloth where the tent will be erected and remove tent top from the bag.
- Unroll and unfold the tent top on the desired spot to be covered. Keep the tent top as square as possible. Pull the perimeter of the tent as tight as possible, the center of the tent top will not be tight or lay flat due to the peak of the tent.
- Stretch the ropes straight out to their full length.
- Layout all of the hardware around the tent:
 - Assemble the 2 piece side poles together
 - 1 pole to each grommet location
 - Place the anchoring pins approximately 3.5' from the grommet locations
 - 2 anchoring pins go to each corner location (place 90° apart)
 - Assemble the 3 piece center poles together
- Drive all anchoring pins vertically into the ground approximately 3.5' (half the height of the side poles) from the pole locations. Let approximately 6" of the stake exposed.
- Loop the rope around the hook on the anchoring pin while the tent top is laying on the ground.
- The corner poles are now ready to be erected. Start at opposite corners and insert the pole pin through the metal double D ring and the brass grommet (very important that the pin goes through both holes). Set the corner poles so they are leaning in towards the tent at about a 60°-75° angle. Insert the remaining corners poles. When all the poles are up in the air, a good portion of the weight has been lifted, and easier access has been provided to the center of the tent.
- Insert the center pole tip through the center "O" ring and brass grommet; make sure that the pin is not caught on any part of the tent top. Push the center pole into a vertical position.


10' x 10' Presto! Assembly Directions

10. Tighten all corner ropes using the wooden rope adjuster until the corner poles are vertically straight up and down. The perimeter of the tent should be taut. If the tent is not taut, check the squareness of your tent by measuring diagonally from corner pole to corner pole and make sure both diagonal measurement are the same.

11. Straighten the center pole so it's setting vertical straight up and down. To do this the corner ropes may need to be loosened.

12. At this point the tent top should be erect, with the corner poles and center pole vertically straight.

13. Tie off the jump rope attached at each side pole location. This rope is necessary to secure the pole to the tent top because wind can create up lift conditions and pull the tent top off of the pole pins, which could cause the tent to collapse or the pin to puncture the tent top. Secure the jump rope by pulling it six to twelve inches down the pole, bringing it around the pole and then between the pole and the rope itself. Pull it back taut to create tension on the vertical length. Now wrap the rope around the pole and vertical portion of the jump rope creating a tight coil that keeps the rope from slipping up. On the last coil, pull the end of the rope through to tie it off. (see diagram). Repeat steps for the center pole at eye level (5-6 feet).

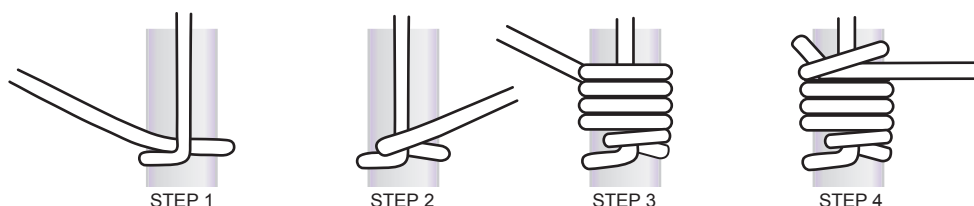

14. The tent top should now be complete! If sidewalls are desired, unroll the sidewalls between the stakes and the side poles around the perimeter of the tent. Starting at a side pole, clip the sidewall snap hooks to the rope line that is attached to the tent top.



If you have any questions, please contact Celina Tents support department at:

support@celinatent.com

1-866-GET-TENT / 419-586-3610

www.GetTent.com

